
spirax /sarco®

Thermo-Dynamic[®] Steam Trap TD52

The Thermo-Dynamic® steam trap cycles periodically to discharge condensate very near to steam temperature. It is unaffected by waterhammer or superheat.

Model	TD52
РМО	600 psig
Sizes	3/8", 1/2", 3/4", 1"
Connections	NPT
Construction	stainless steel

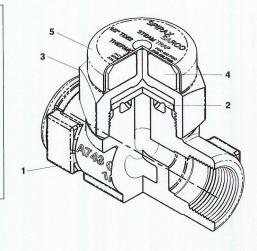

Inlet Pressure		3/8" TD52	1/2" TD52	TD52	TD52
psig	barg	1/2" TD52L	3/4" TD52L	3/4"	1"
3.5	.24	180	300	405	640
5	.34	185	310	420	670
10	.69	190	345	470	725
20	1.4	200	410	560	865
30	2.1	215	465	640	980
50	3.5	245	575	810	1200
75	5.2	305	700	1000	1470
100	6.9	370	810	1160	1750
150	10.3	500	1000	1450	2200
200	13.8	610	1140	1670	2600
250	17.2	700	1270	1900	2900
300	20.7	790	1410	2100	3250
350	24.1	880	1530	2250	3500
400	27.6	960	1630	2430	3780
450	31.0	1050	1730	2600	4020
500	34.5	1100	1830	2750	4250
550	37.9	1160	1910	2900	4450
600	41.4	1250	2000	3050	4700

Limiting Operating Conditions

Max. Operating Pressure (PMO) 600 psig(42 barg)

Max. Operating Temperature 800°F (427°C) at all operating pressures

Minimum pressure for satisfactory operation is 3.5 psig, (0.24 barg).

Maximum back pressure should not exceed 80% of the inlet pressure under any conditions of operation, otherwise the trap may not shut.

Pressure Shell Design Conditions

	9	
PMA Max. allowable pressure	600 psig/up to 800°F	42 barg/up to 427°C
TMA Max. allowable temperature	800°F/0-600 psig	427°C/0-42 barg

Construction Materials				
No.	Part	Material		
1	Body	Stainless Steel (with ENP)	ASTM A743 GR. CA40F	
2	Disc	Stainless Steel	AISI 420	
3	Сар	Stainless Steel (with ENP)	ASTM A743 GR. CA40F	
4	Insulator	Ceramic		
5	Nameplate Cover	Stainless Steel	Type 304	

Typical Applications

Steam main drainage and tracer lines, process equipment, laundry and kitchen equipment, superheated steam applications, outdoor installations subject to freezing.


Local regulation may restrict the use of this product below the conditions quoted. Limiting conditions refer to


In the interests of development and improvement of the product, we reserve the right to change the specification EPRI Edgemont Precision Rebuilders, Inc.

on EPRI Edgemont Precision Rebuilders, Inc Matlack Industrial Center 207 Carter Dr Unit C West Chester, PA 19382 800 356-3774

Thermo-Dynamic[®] Steam Trap TD52

		Dimensions (nominal) in inches and milling			s and millimet	eters	
Туре	Α	В	С	D	E	F	Weight
3/8 " TD52	2	1.03	2.2	1.7	1	.4	.84 lbs
	50.8	26.2	55.9	43.2	25.4	10.2	.38 kg
1/2" TD52L	2.7	1.24	2.5	1.7	1.2	.4	1.2 lbs
	68.6	31.5	63.5	43.2	30.4	10.2	.54 kg
1/2" TD52	2.7	1.24	2.5	1.8	1.2	.4	1.2 lbs
	68.6	31.5	63.5	45.7	30.4	10.2	.54 kg
3/4" TD52L	2.8	1.56	2.8	1.8	1.5	.4	1.94 lbs
	71.1	39.6	71.1	45.7	38.1	10.2	.88 kg
3/4" TD52	2.8	1.56	2.9	2.1	1.5	4	1.94 lbs
	71.1	39.6	73.7	53.3	38.1	10.2	88 kg
1" TD52	3.3	1.91	3.4	2.5	1.8	6	3.13 lbs
	83.8	46	86.4	63.5	45.7	15.2	1.42 kg

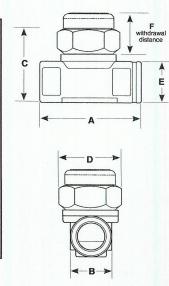

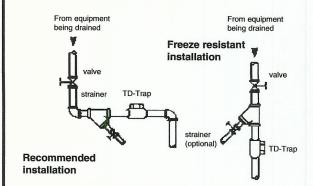

Installation

The preferred installation is in the horizontal position as close as possible to equipment being drained. Install strainer (20 mesh) upstream and full port isolating valves upstream and downstream of trap. Piping to and from the trap should be at least equal to or one size larger than trap connection. Do not weld pipe connection to trap. Body material is not suitable for welding.

For freeze resistant installations, all drains must be pitched toward the trap for gravity flow. Trap must be installed vertically, discharging downward. Discharge piping must be self-draining.

Sample Specification

Steam trap shall be all stainless steel thermo-Dynamic® disc type with connections on a common center line, which will operate in any position. Integral seat design with hardened disc and seating surfaces. Trap to have integral insulating cap.

Maintenance

This product can be maintained without disturbing the piping connections. Complete isolation of the trap from both supply and return line is required before any servicing is performed.


The trap should be disassembled periodically for inspection and cleaning of the disc and seat.

The only wearing parts of the trap are the disc and seat rings, which should be inspected and cleaned periodically. Slight wear can often be corrected by resurfacing on a lapping plate.

Caution: Only perform maintenance after trap has been isolated.

Complete installation and maintenance instructions are given in $\mbox{IM-2-516-US}$, which accompanies the product.



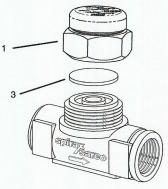

Disc	3
Cap Assembly	1

arco, Inc. 2009

EPRI Edgemont Precision Rebuilders, Inc. Matlack Industrial Center 207 Carter Dr Unit C West Chester, PA 19382

Telephone: 800 356-3774

Spirax Sarco, Inc., 1150 Northpoint Blvd., Blythewood, SC 29016