

## TE-6300P Series Outdoor Air Temperature Sensors

### Applications

**IMPORTANT:** The TE-6300P Series Outdoor Air Temperature Sensors are intended to provide an input to equipment under normal operating conditions. Where failure or malfunction of the TE-6300P sensor could lead to personal injury or property damage to the controlled equipment or other property, additional precautions must be designed into the control system. Incorporate and maintain other devices such as supervisory or alarm systems or safety or limit controls intended to warn of, or protect against, failure or malfunction of the TE-6300P sensor.

### Installation

**IMPORTANT:** Do not install the TE-6300P Series Outdoor Air Temperature Sensor in ambient temperatures beyond the specified -50 to 122°F (-46 to 50°C) temperature range. Installing the temperature sensor in ambient temperatures beyond this range may damage the unit and void the warranty.

### Dimensions

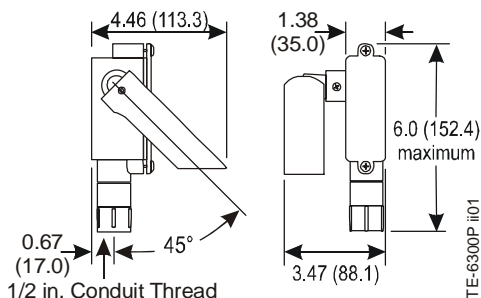


Figure 1: Outdoor Air Sensor Dimensions, in. (mm)

### Mounting

#### Location Considerations

- Avoid areas subject to excessive vibration, electrical noise, direct sunlight, or the effects of radiant heat.
- Keep electrical wiring as short as possible to minimize temperature error.

### Mounting the Temperature Sensor

See Figure 2 and mount the outdoor air temperature sensor as follows:

1. Using the 1/2-14 NPT threads, securely attach the conduit box to the conduit run.

**Note:** For optimal performance, attach the TE-6300P only to rigid conduit. Locate the device in the open air; do not place it in contact with the mounting surface. Secure the conduit to the mounting surface using an appropriate clamp.

2. Wire the sensor to the controller using the wire nuts provided.

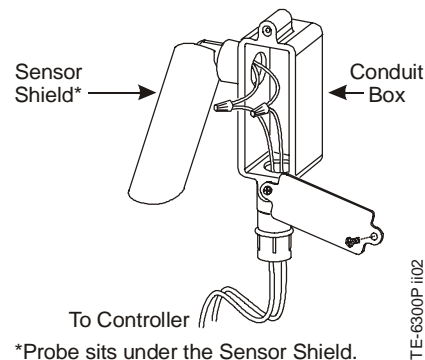


Figure 2: Installing the Outdoor Air Sensor

3. Reposition the cover and tighten the retention screws.

### Wiring

For 1k ohm nickel temperature sensors, wire resistance can cause approximately 1°F (0.56°C) of error for every 250 ft (76 m) run of 18 AWG wire, or every 100 ft (31 m) run of 22 AWG wire. For 1k ohm platinum temperature sensors, wire resistance can cause approximately 1°F (0.56°C) of error for every 150 ft (46 m) run of 18 AWG wire, or every 50 ft (15 m) run of 22 AWG wire. To minimize error due to field wiring, limit the total resistance of all nickel temperature sensor wiring to 3 ohms, and all platinum temperature sensor wiring to 2 ohms.

The 2.2k and 10k ohm thermistor applications permit wiring to be relatively long before wire resistance adds significantly to total resistance measured at the controller. As a general rule, a 150 ft (46 m) two-wire 18 AWG run contributes 2 ohms of error, or less than 1F° (0.56C°) error, over the sensor operating temperature range.

Refer to the appropriate controller documentation for recommended sensor wiring. See Table 1 for an explanation of the lead wiring color convention.

**Table 1: Lead Wiring (22 AWG, 6 in.) Color Code**

Sensor Type	Lead Color
1k ohm Nickel	White
1k ohm Platinum	White with blue stripe
2.2k ohm Thermistor	White with green stripe
10k ohm Type II Thermistor	White with green stripe



**CAUTION: Risk of Property Damage.**

Do not apply power to the system before checking all wiring connections. Short circuited or improperly connected wires may result in permanent damage to the equipment.

**IMPORTANT:** Make all wiring connections in accordance with local, national, and regional regulations.

## Repair Information

If the TE-6300P Series Outdoor Air Temperature Sensor fails to operate within its specifications, replace the unit. For a replacement sensor, contact the nearest Johnson Controls® representative.

## Technical Specifications

<b>Product</b>	TE-6300P Series Outdoor Air Temperature Sensors	
<b>Models</b>	<b>TE-6313P-1</b>	Thin-Film Nickel Temperature Sensor
	<b>TE-6323P-1</b>	Thin-Film Platinum Temperature Sensor
	<b>TE-6343P-1</b>	2.2k ohm Thermistor Temperature Sensor
	<b>TE-6363P-1</b>	10k ohm, Type II Thermistor Temperature Sensor
<b>Sensor Reference Resistance</b>	<b>Nickel</b>	1k ohms at 70°F (21°C)
	<b>Platinum</b>	1k ohms at 32°F (0°C)
	<b>2.2k ohm Thermistor</b>	2,252 ohms at 77°F (25°C)
	<b>10k ohm Thermistor</b>	10k ohms at 77°F (25°C)
<b>Sensor Accuracy</b>	<b>Nickel</b>	±0.34F° at 70°F (±0.19C° at 21°C)
	<b>Platinum</b>	±0.73F° at 70°F (±0.41C° at 21°C), DIN Class B
	<b>2.2k ohm Thermistor</b>	±0.36F° (±0.2C°) in the range: 32 to 158°F (0 to 70°C)
	<b>10k ohm Thermistor</b>	±0.9F° (±0.5C°) in the range: 32 to 158°F (0 to 70°C)
<b>Sensor Temperature Coefficient</b>	<b>Nickel</b>	Approximately 3 ohms/F° (5.4 ohms/C°)
	<b>Platinum</b>	Approximately 2 ohms/F° (3.9 ohms/C°)
	<b>2.2k ohm Thermistor</b>	Nonlinear, Negative Temperature Coefficient (NTC)
	<b>10k ohm Thermistor</b>	Nonlinear, NTC, Type II
<b>Materials</b>	<b>Probe</b>	1/4 in. (6.4 mm) O.D. x 3 in. (76 mm) long Stainless Steel
	<b>Enclosure and Shield</b>	Rigid Thermoplastic
<b>Operating Conditions</b>	<b>Temperature</b>	-50 to 122°F (-46 to 50°C)

The performance specifications are nominal and conform to acceptable industry standards. For application at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls, Inc. shall not be liable for damages resulting from misapplication or misuse of its products.



**Controls Group**  
507 E. Michigan Street  
P.O. Box 423  
Milwaukee, WI 53201

Published in U.S.A.  
www.johnsoncontrols.com